

 
Assembly Instruction

Product Name


BOEING-EXE-1818-TE/CH

Page


1-6

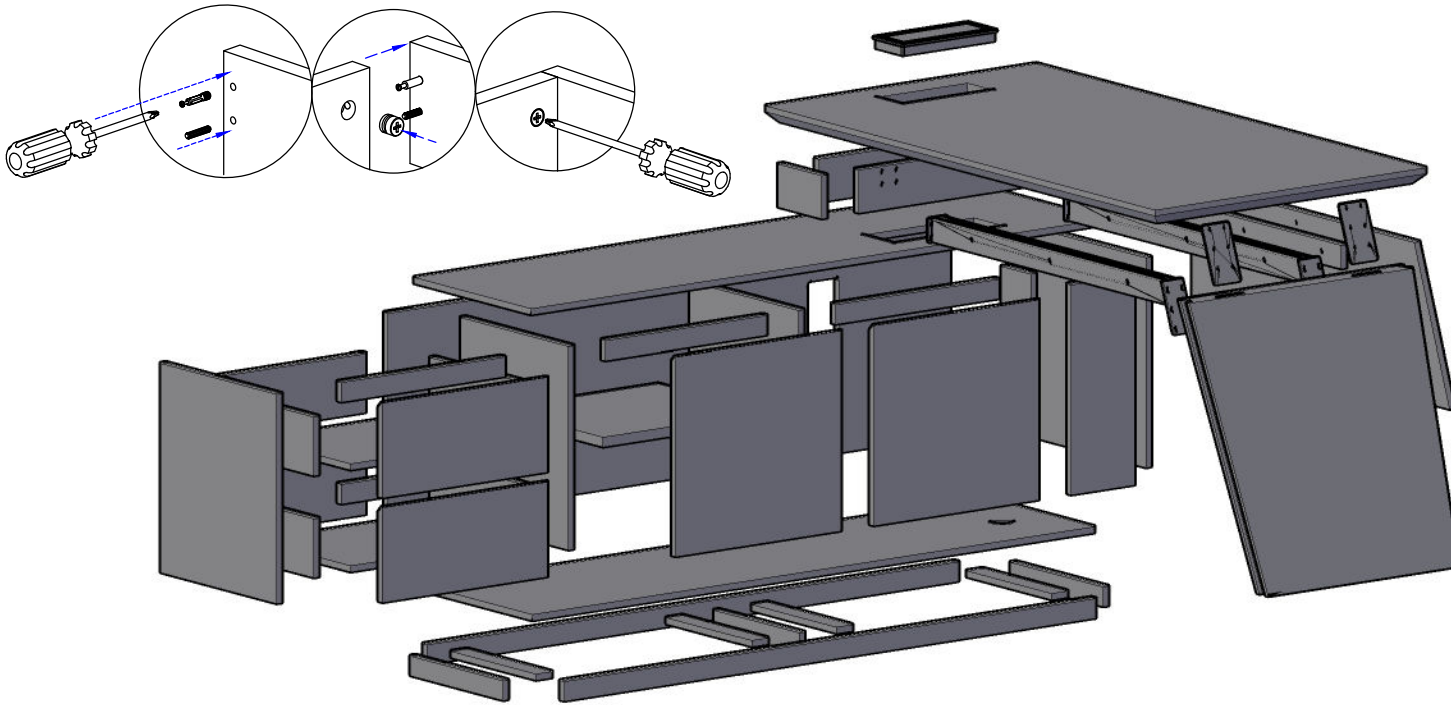

 
STEP 1

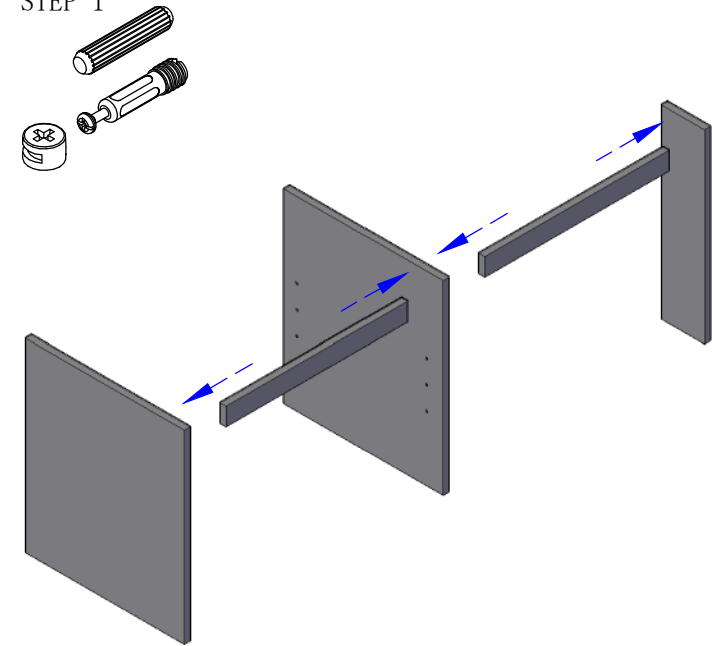

 
STEP 2

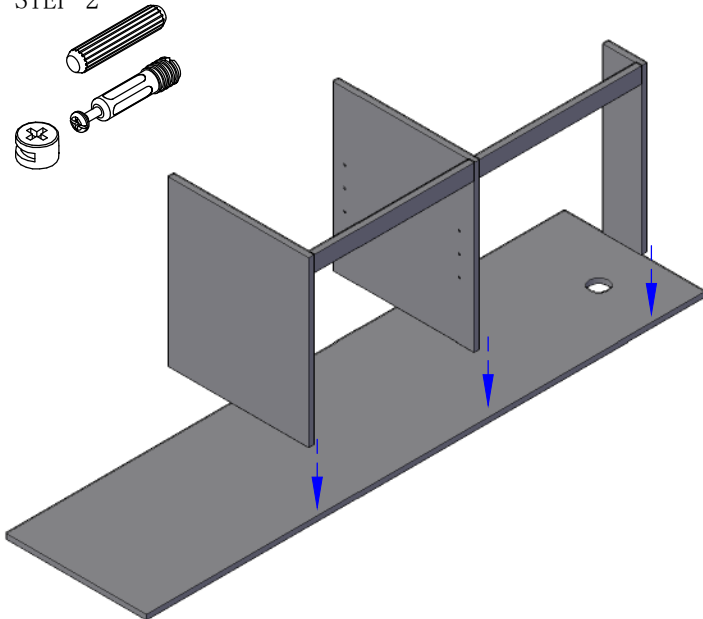

 STEP 3

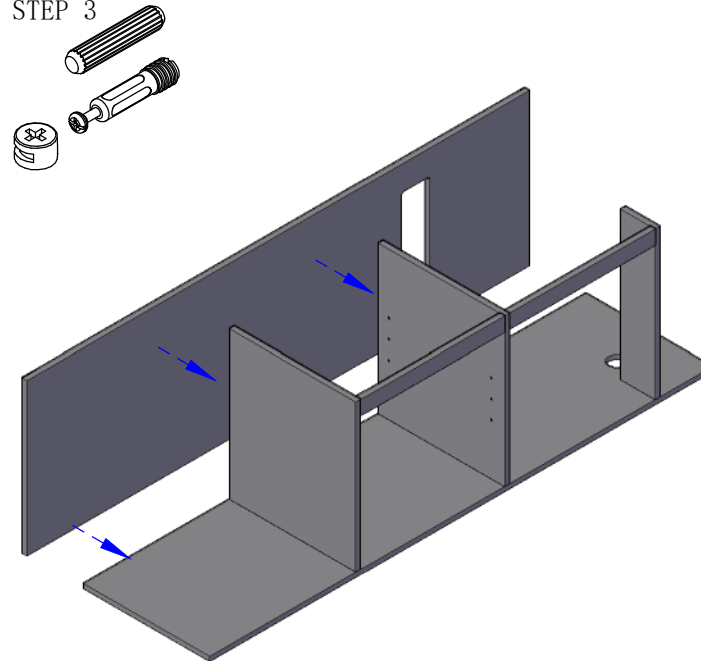

 STEP 4

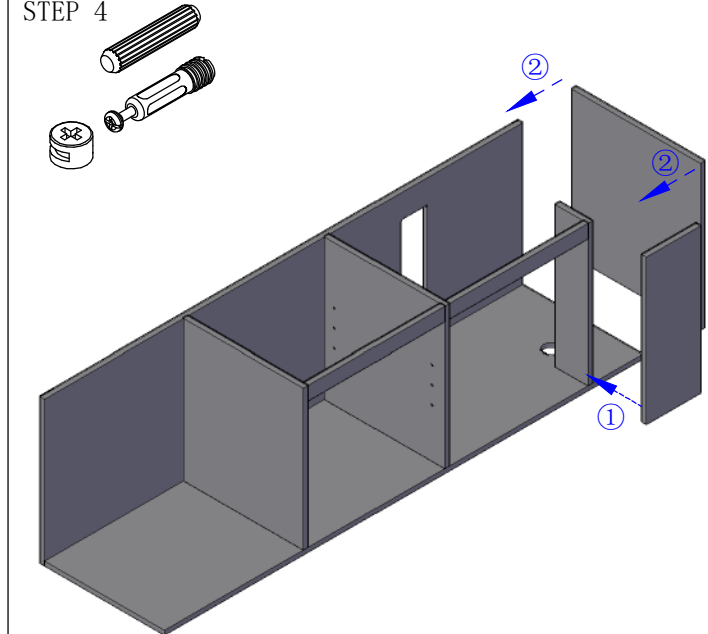

Assembly Instruction

 
Product Name

BOEING-EXE-1818-TE/CH


Page

2-6


STEP 5

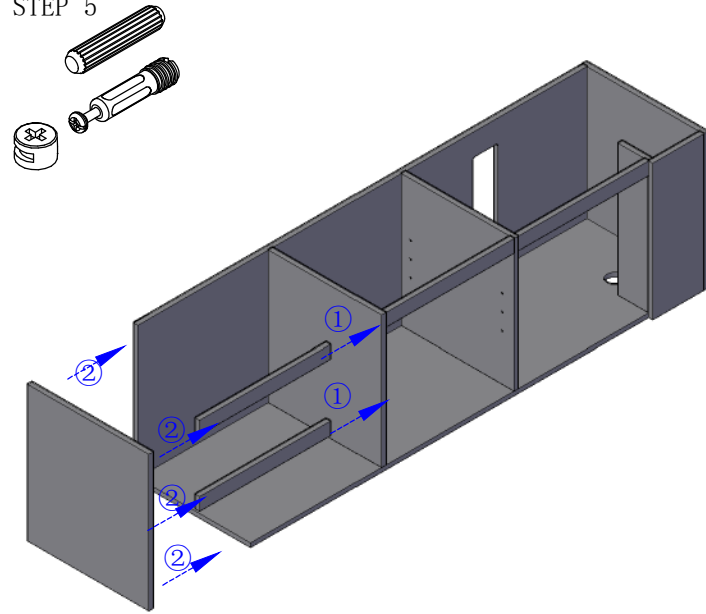

 
STEP 6

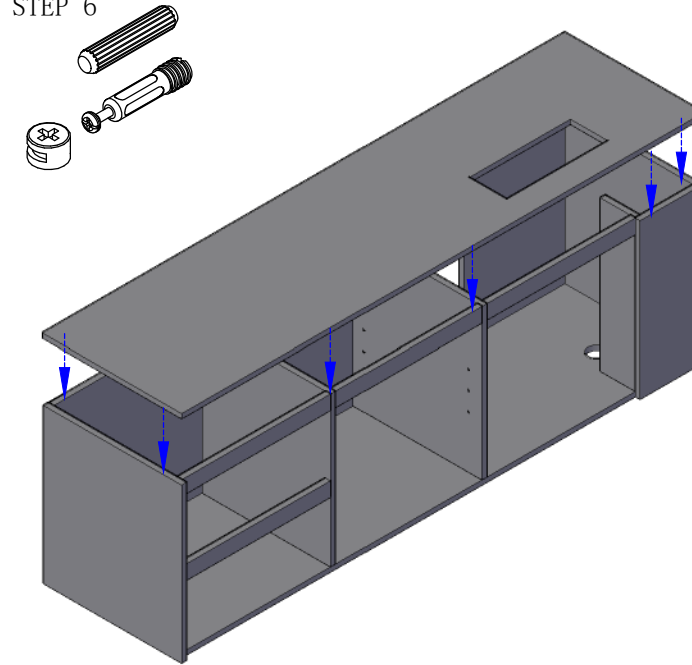

 
STEP 7

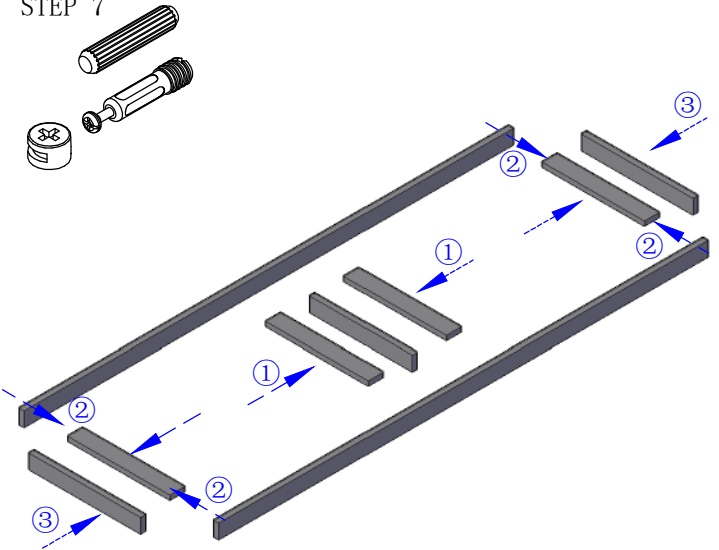

 
STEP 8

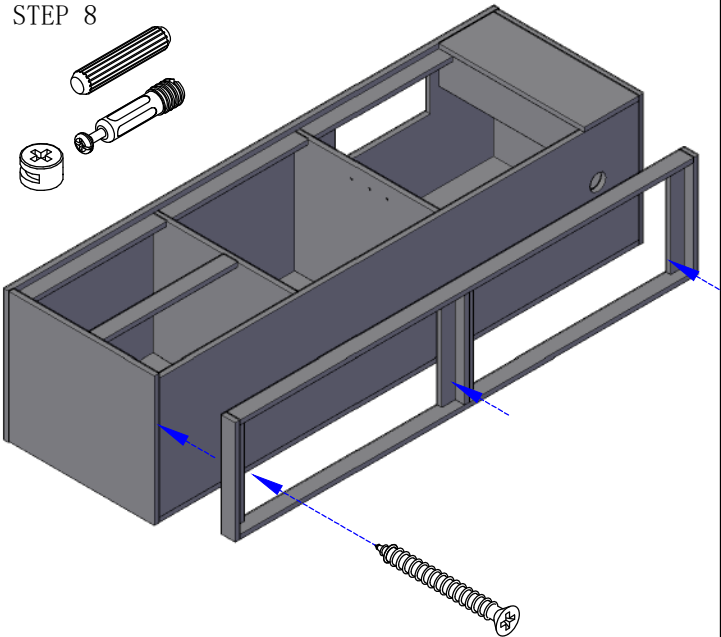

 STEP 9

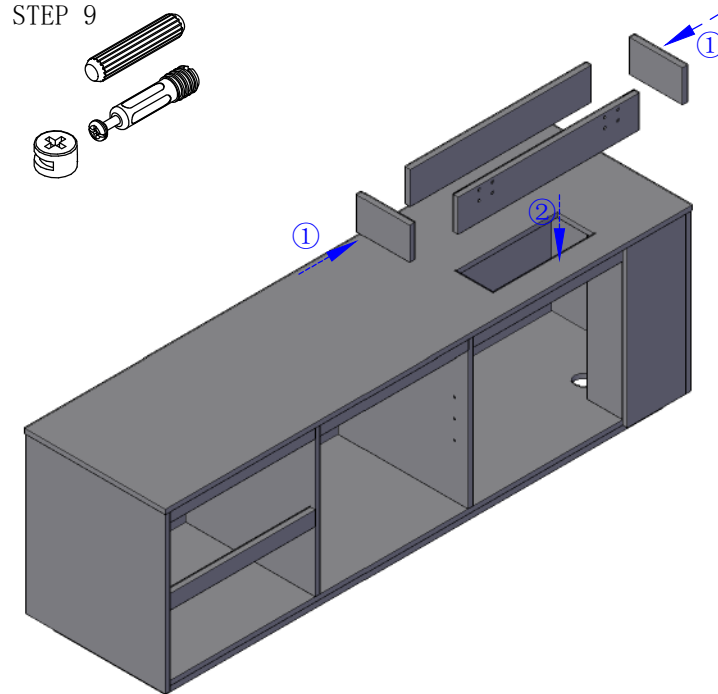


 STEP 10

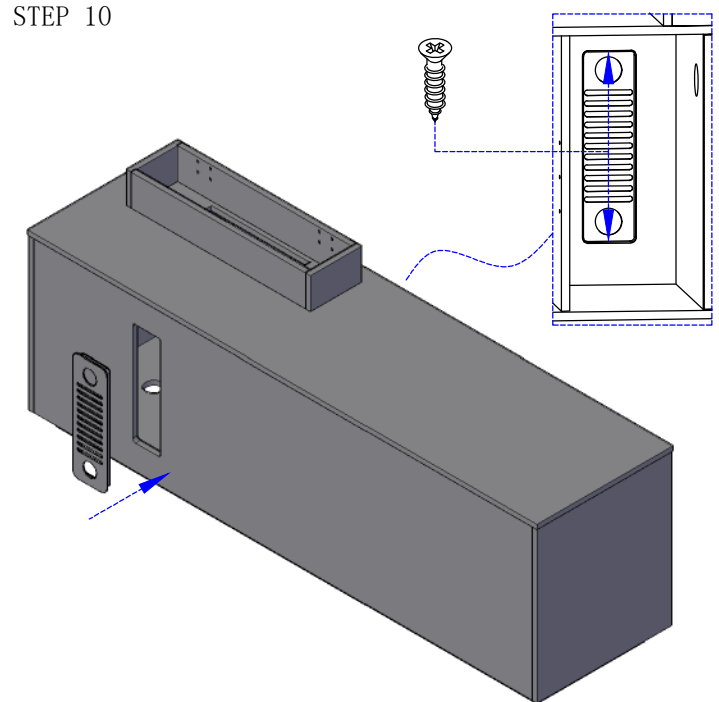


Assembly Instruction

 
STEP 11

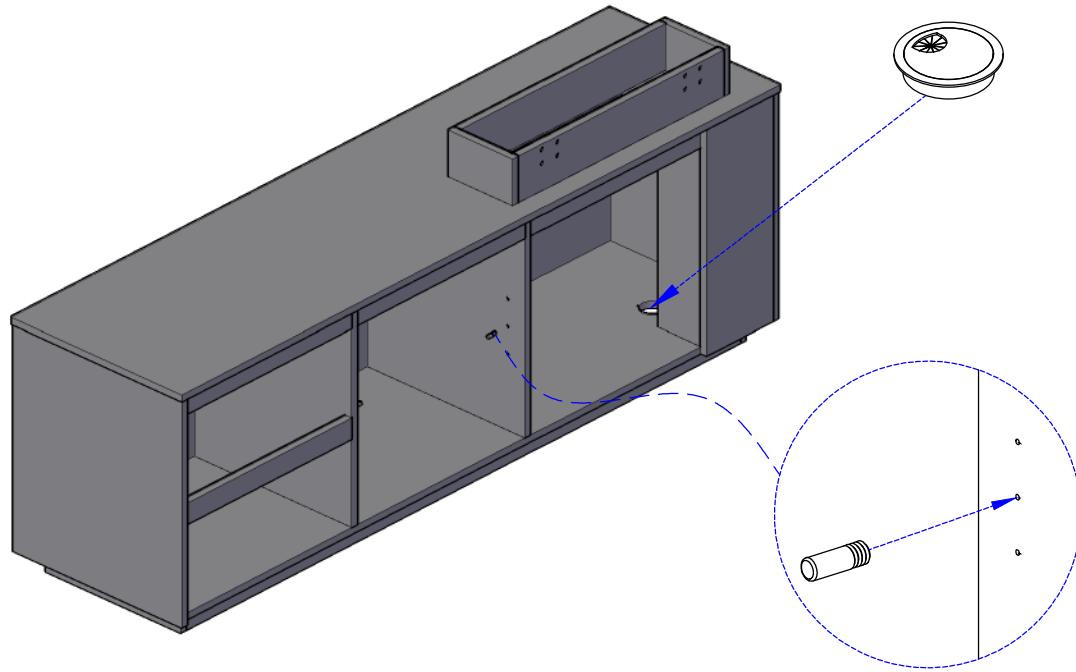

 
STEP 12

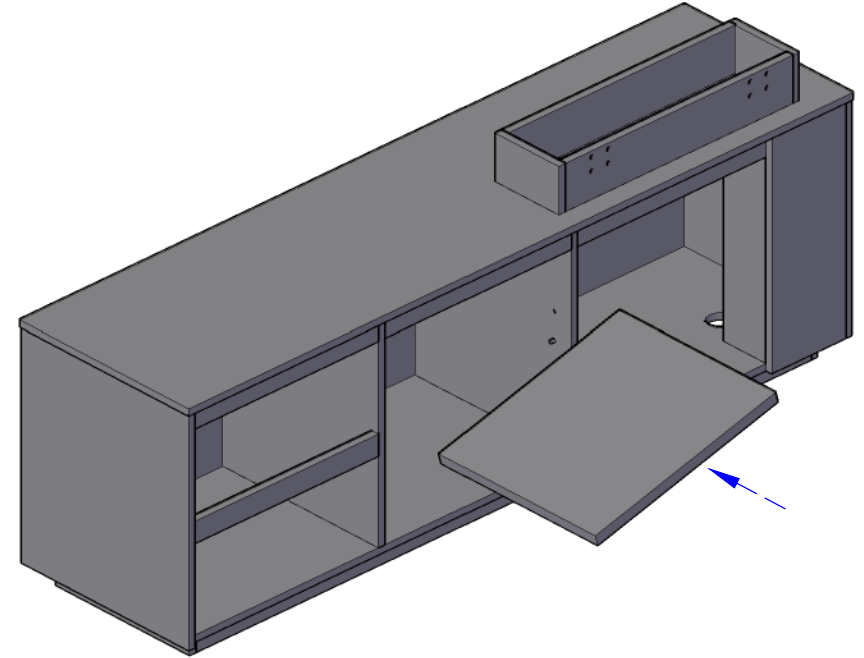

 STEP 13

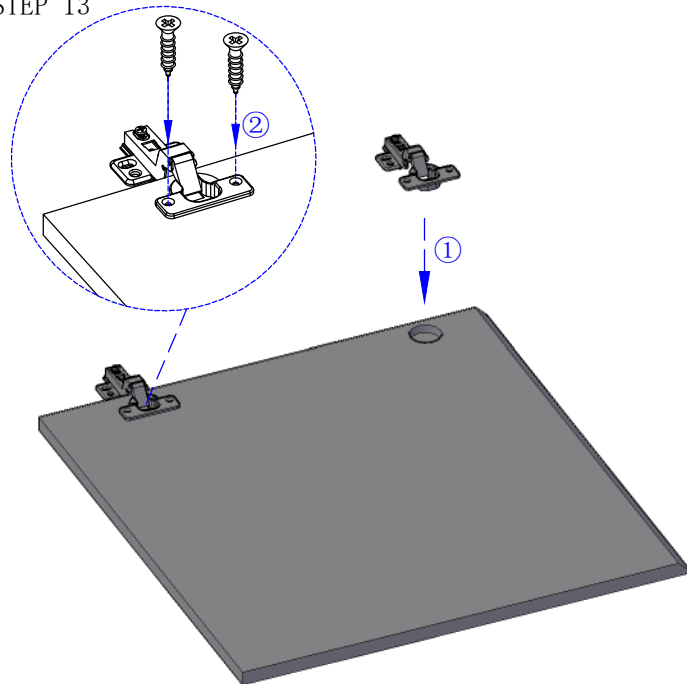


 STEP 14

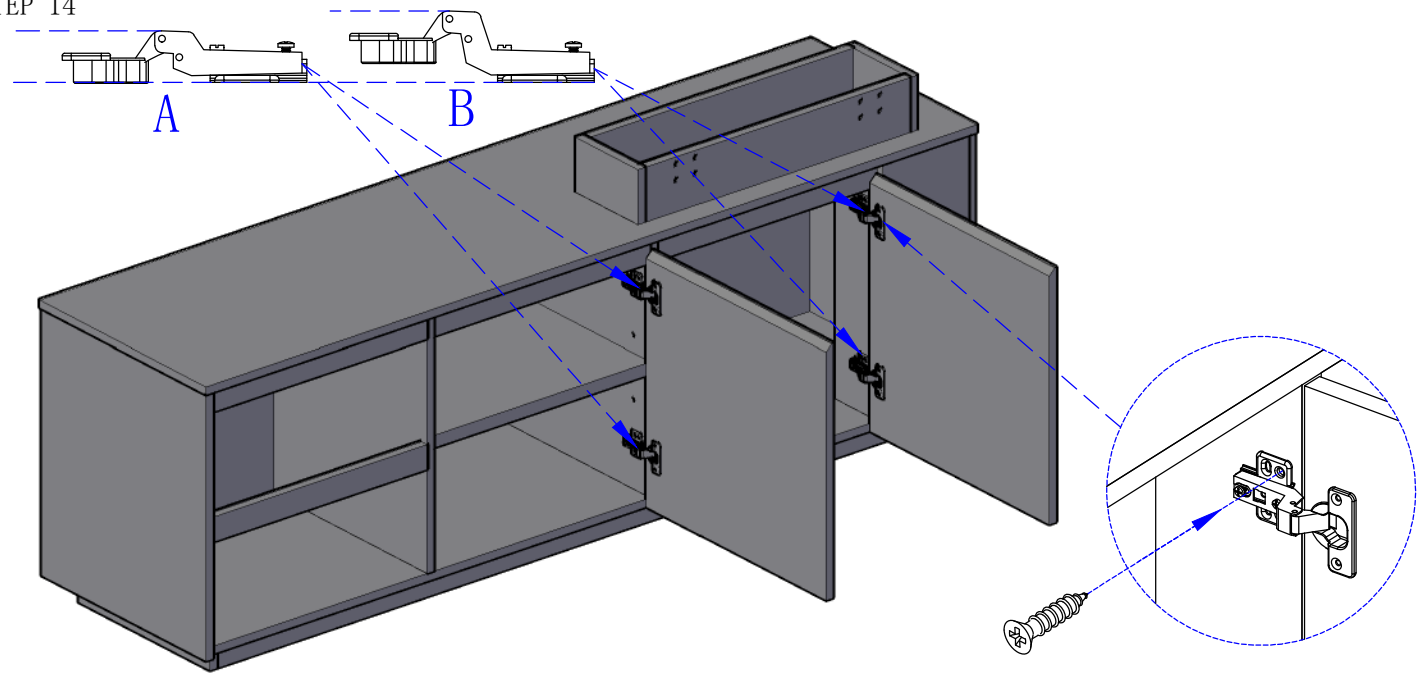


Assembly Instruction

 
STEP 15

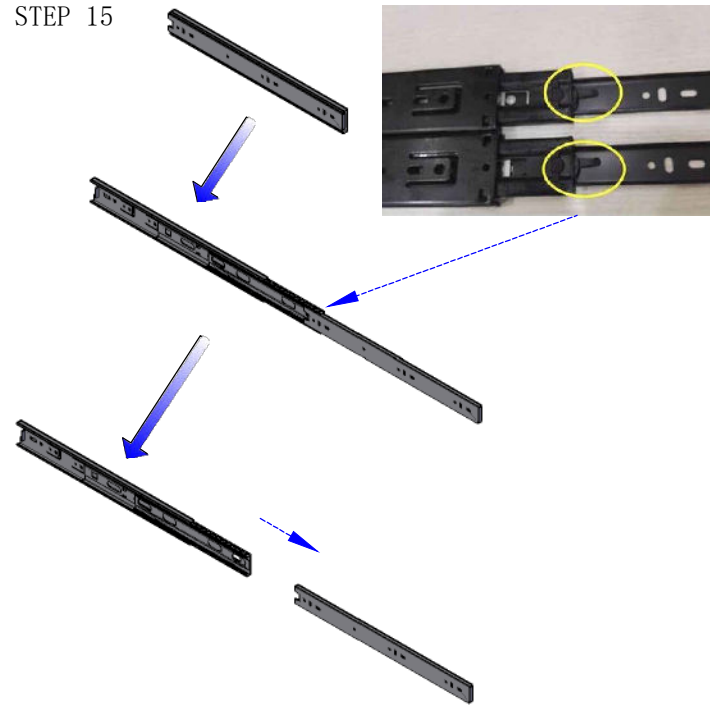

 
STEP 16

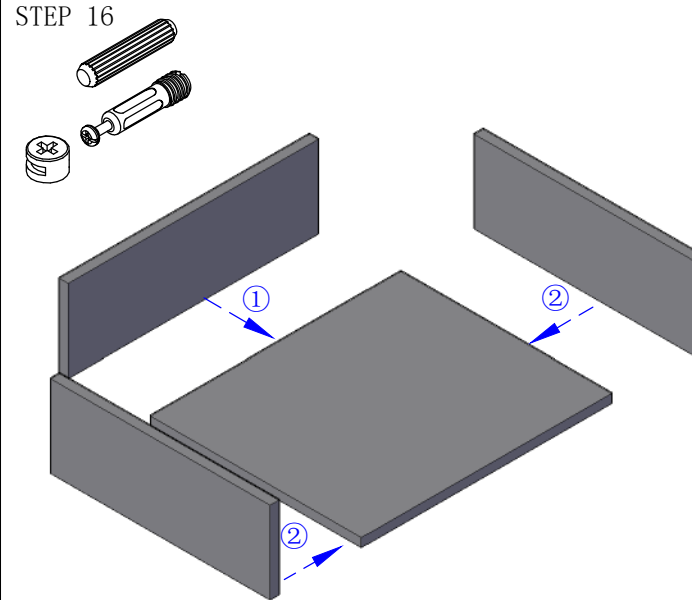

 
STEP 17

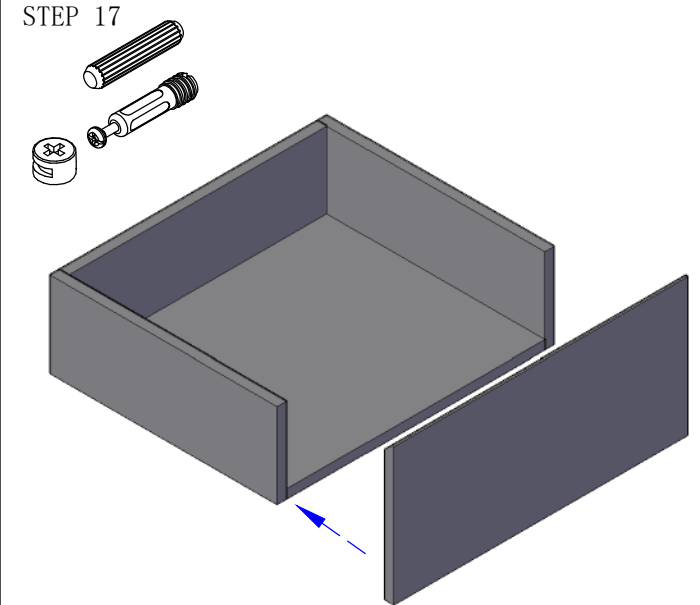

 
STEP 18

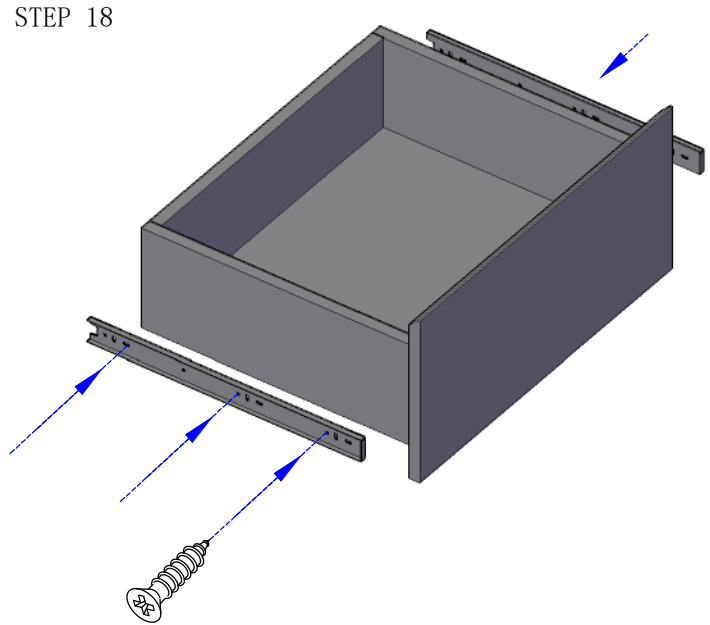

 STEP 19

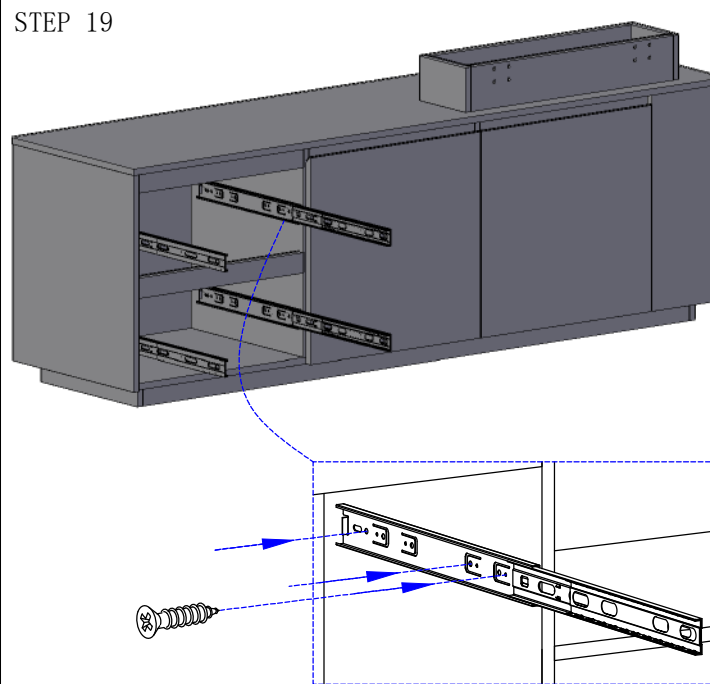

 STEP 20

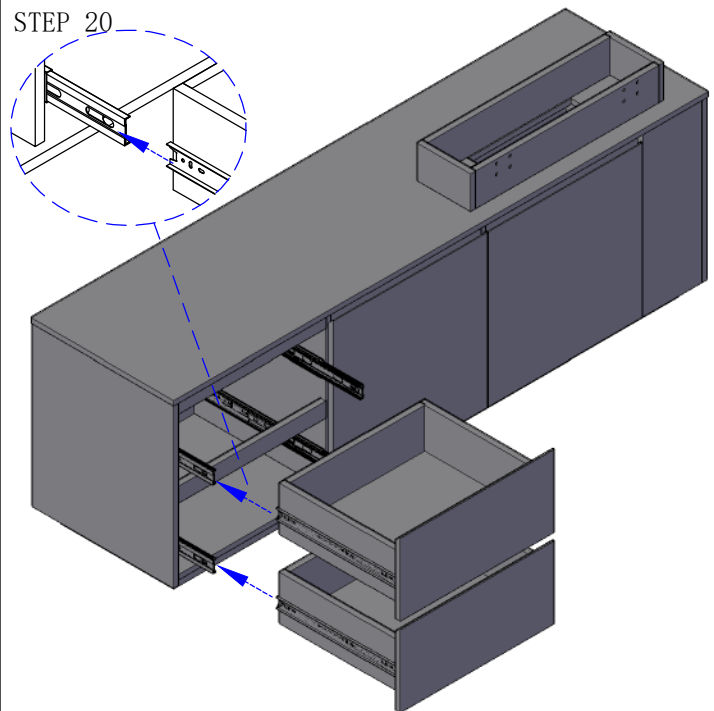


Assembly Instruction

Product Name
BOEING-EXE-1818-TE/CH


Page

5-6

 
STEP 21

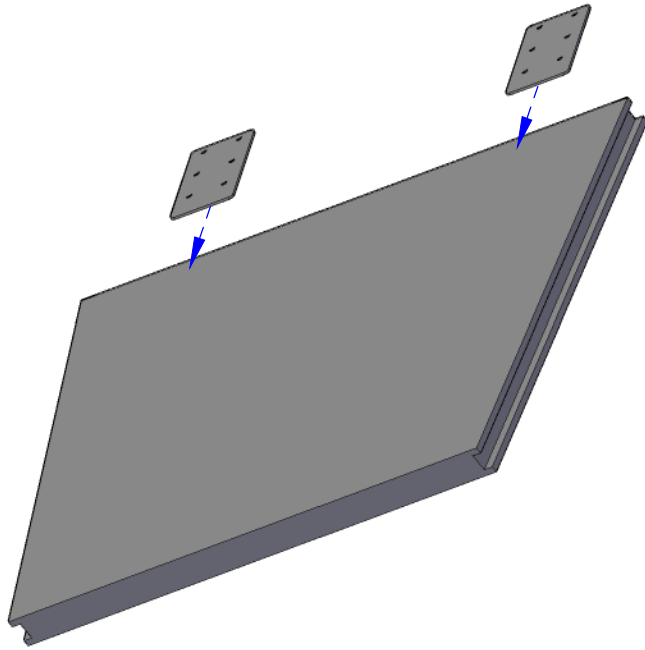

 
STEP 22

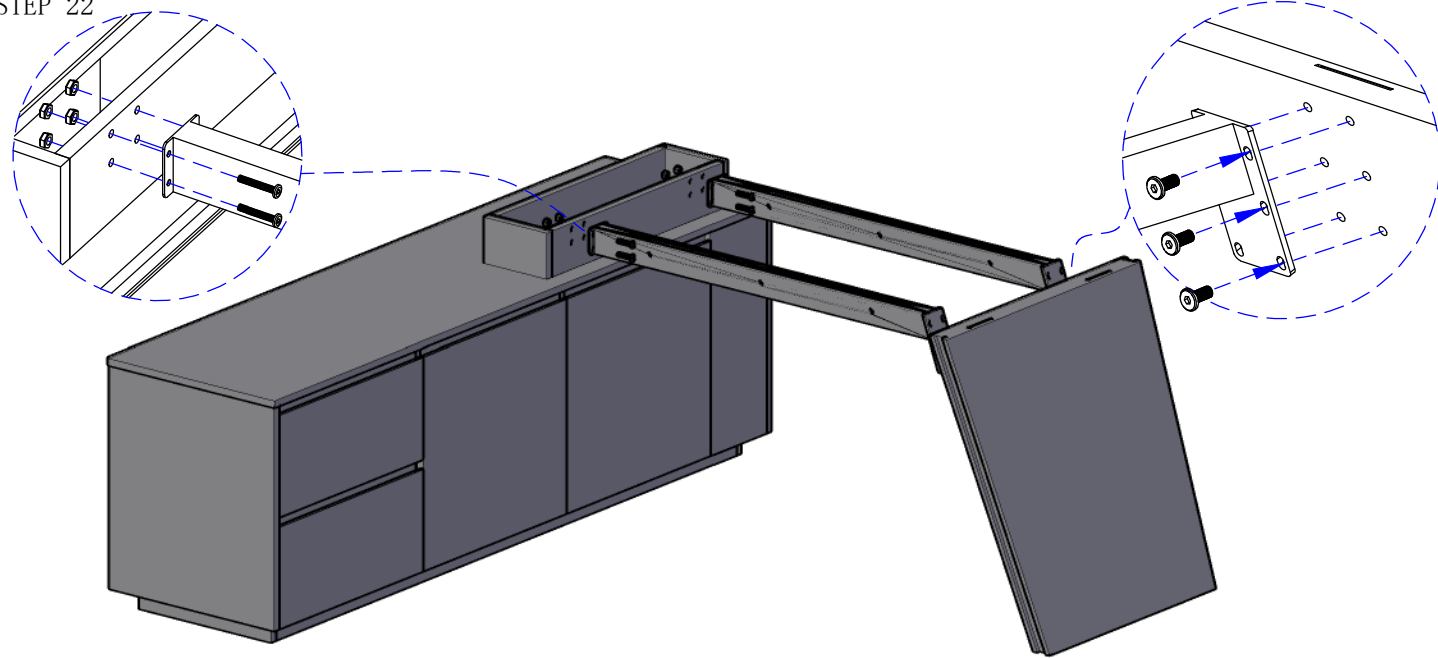

 STEP 23

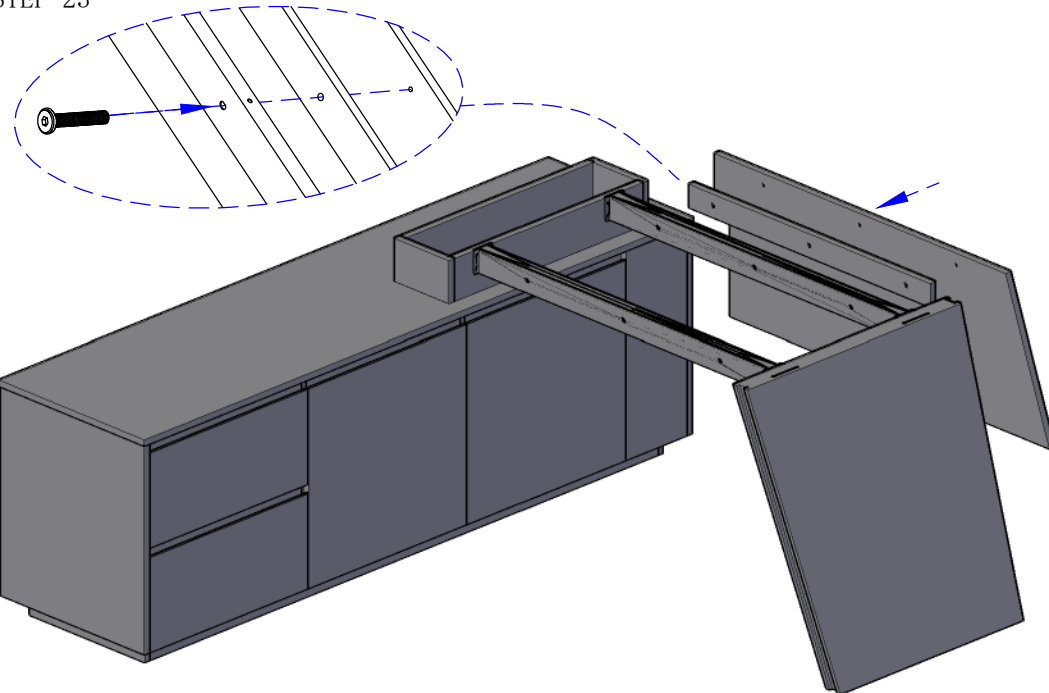

 STEP 24

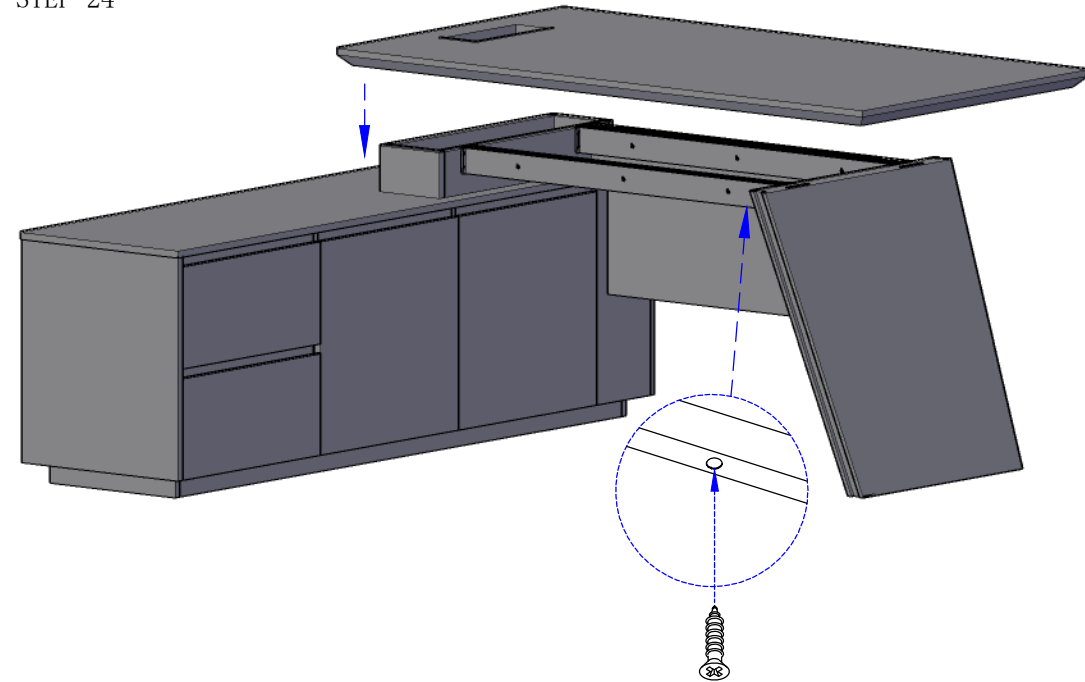

Assembly Instruction

Product Name
BOEING-EXE-1818-TE/CH

Page

6-6

STEP 25

