
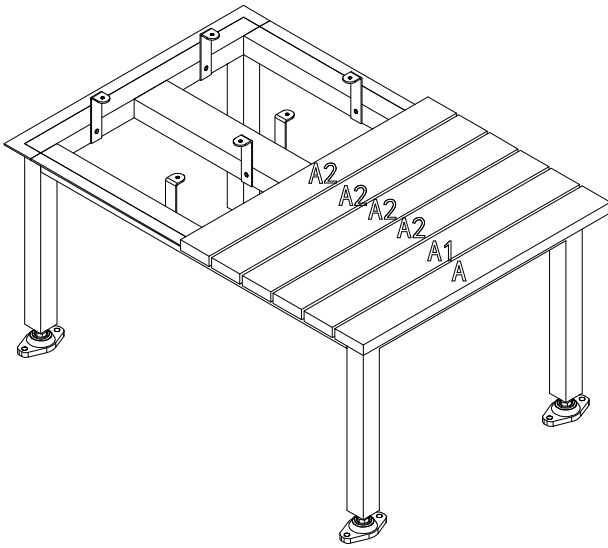





Assembly Instructions


MODEL NO:SSD61-30 T/B




5.5mm drill bit is required (not supplied) to drill through the bottom of steel lockers to attach bolt

Bolt Screw 8×16  16PCS	Wood Screw 4×20  6PCS	for melamine lockers 99H  6PCS
Bolt Screw 6×12  9PCS	Allen Wrench M5  1PCS	for steel lockers 132H  6PCS
Bolt Screw 6×50  15PCS	 12×80 8PCS	 6PCS


STEP1

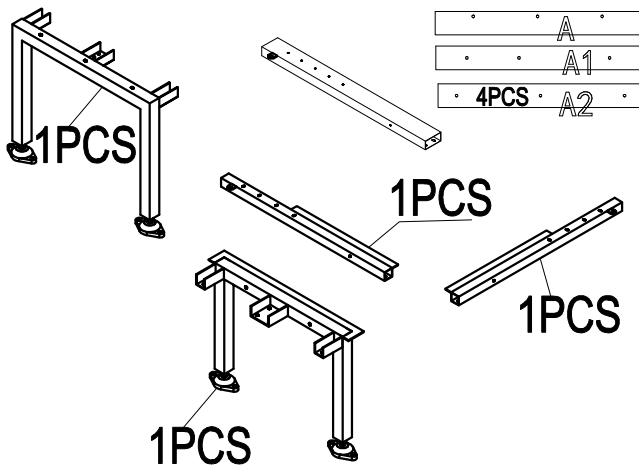


STEP2

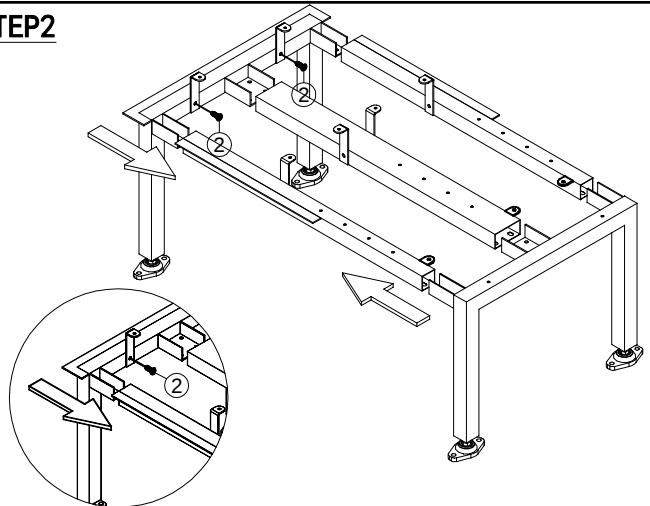

STEP3

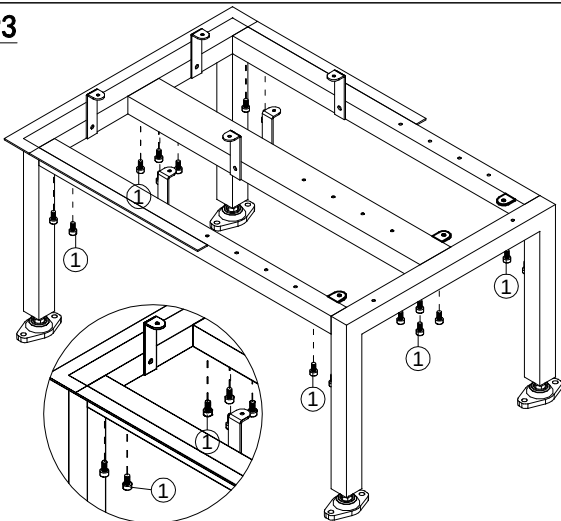


STEP4

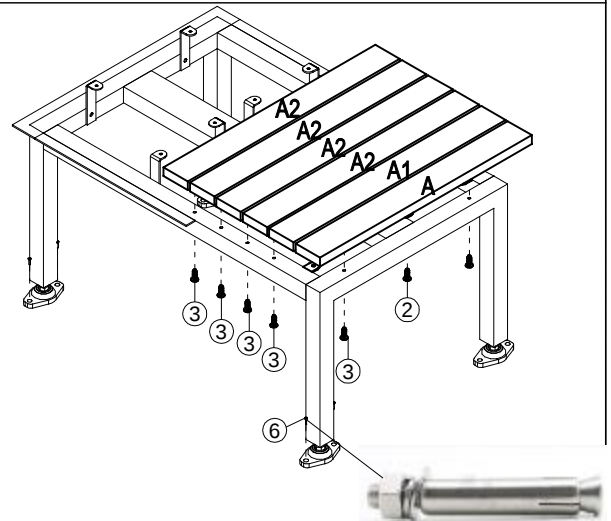

IMPORTANT NOTE:


- Place all laminated parts on a clean and smooth surface such as a rug or carpet to avoid the parts from being scratched.
- Check to be sure that you have all parts and hardware.
- Remove all wrapping materials, including staples & packing straps before you start to assemble.
- Don't tighten all screws/bolts until all completely assembled.
- Keep all hardware parts out of reach of children
- Do not drill holes for Dynabolts through flooring with membrane for waterproofing. Bolting of stands to floor to be done by others (Furnx installers do not bolt locker seats &/or stands to floor)




Assembly Instructions

MODEL NO:SSD61-30 T/B

STEP5

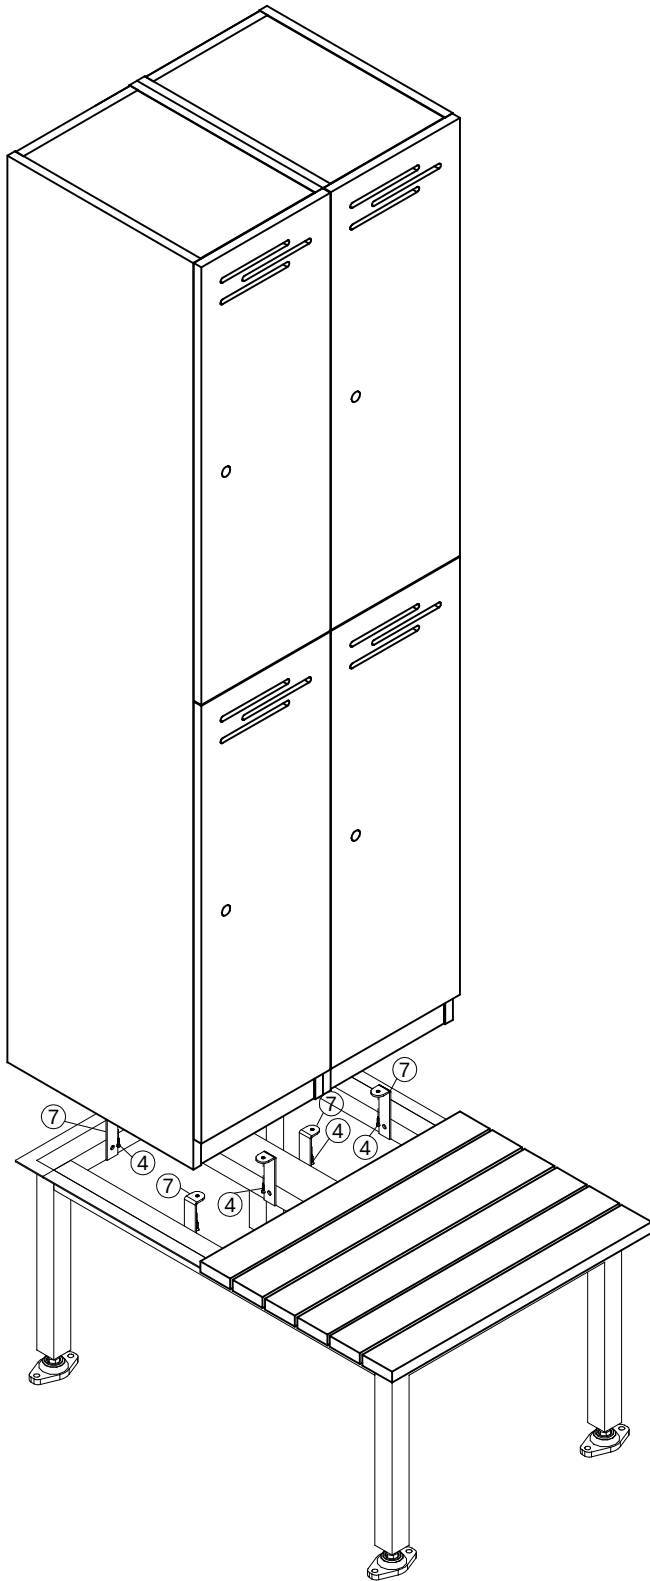

STEP6

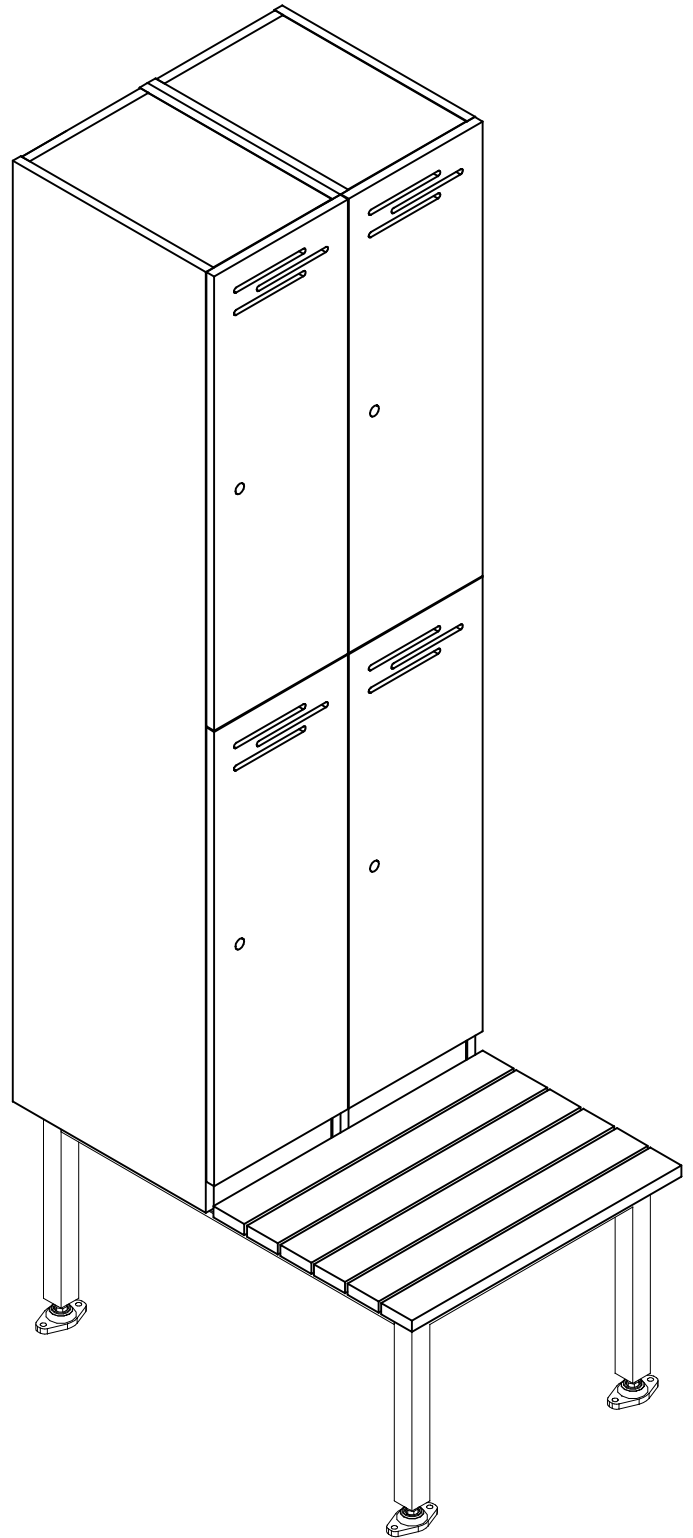

IMPORTANT NOTE:

- Place all laminated parts on a clean and smooth surface such as a rug or carpet to avoid the parts from being scratched.
- Check to be sure that you have all parts and hardware.
- Remove all wrapping materials, including staples & packing straps before you start to assemble.
- Don't tighten all screws/bolts until all is completely assembled.
- Keep all hardware parts out of reach of children
- Do not drill holes for Dynabolts through flooring with membrane for waterproofing. Bolting of stands to floor to be done by others (Furnx installers do not bolt locker seats &/or stands to floor)

