
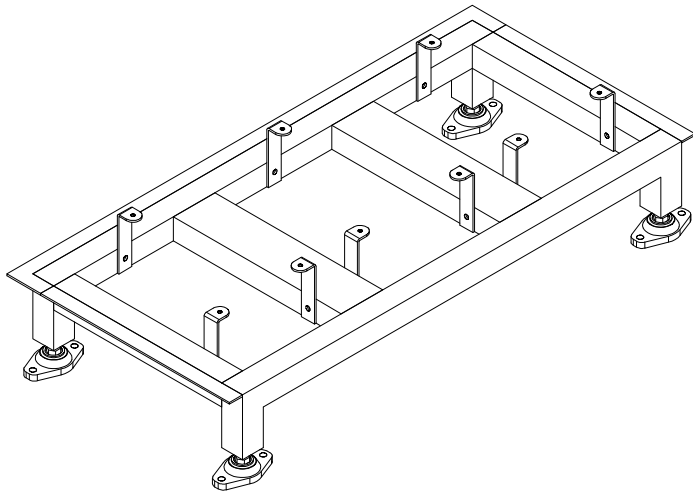




# Assembly Instructions


MODEL NO:STT91-30 T/B




5.5mm drill bit is required ( not supplied ) to drill through the bottom of steel lockers to attach bolt

|                                                                                                                             |                                                                                                                              |                                                                                                                                       |
|-----------------------------------------------------------------------------------------------------------------------------|------------------------------------------------------------------------------------------------------------------------------|---------------------------------------------------------------------------------------------------------------------------------------|
| <b>Bolt Screw</b> 8×16<br><br><b>24PCS</b> | <b>Wood Screw</b> 4×20<br><br><b>9PCS</b> | <b>for melamine lockers</b> 99H<br><br><b>9PCS</b> |
| <b>Bolt Screw</b> 6×12<br><br><b>9PCS</b>  | <b>Allen Wrench</b> M5<br><br><b>1PCS</b> | <b>for steel lockers</b> 132H<br><br><b>9PCS</b>   |
|                                                                                                                             | <br><b>12×80</b> <b>8PCS</b>              | <br><b>9PCS</b>                                    |


## STEP1

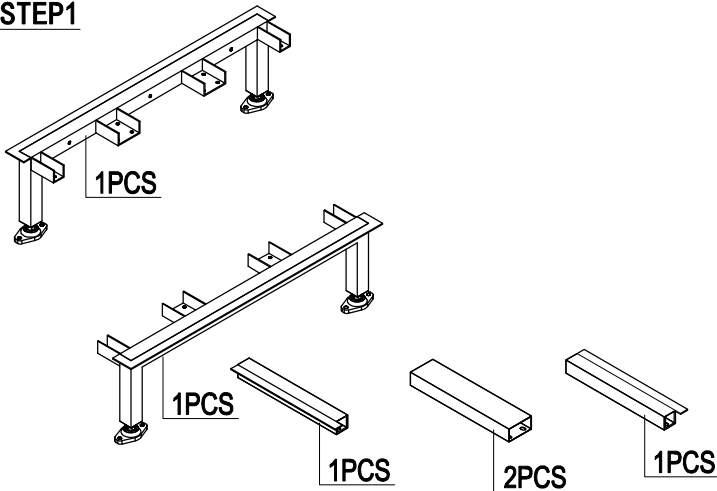


## STEP2

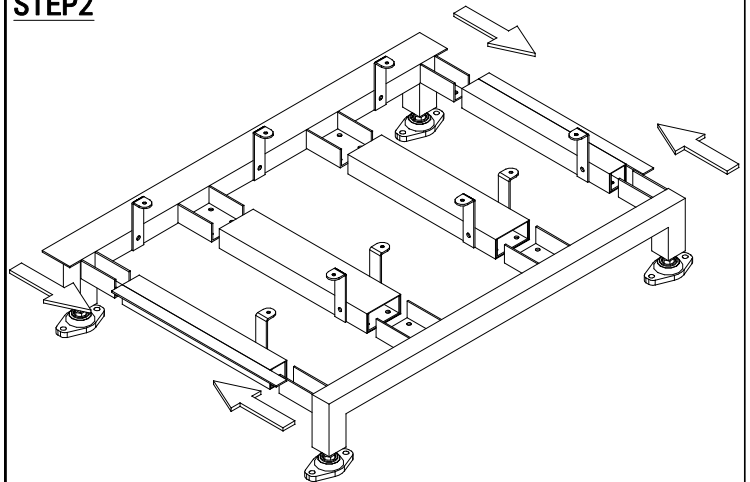

## STEP3

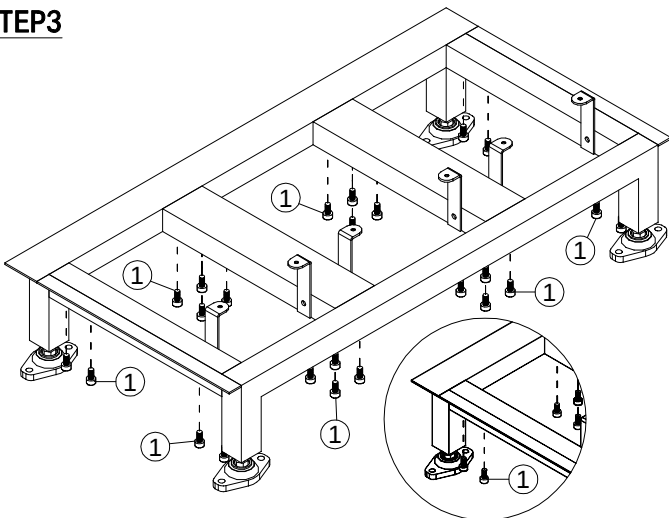


## STEP4

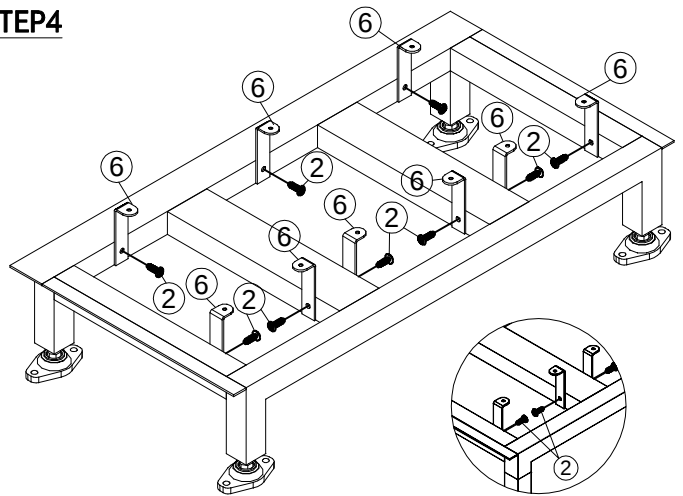

### IMPORTANT NOTE:


- Place all laminated parts on a clean and smooth surface such as a rug or carpet to avoid the parts from being scratched.
- Check to be sure that you have all parts and hardware.
- Remove all wrapping materials,including staples & packing straps before you start to assemble.
- Don't tighten all screws/bolts until all completely assembled.
- Keep all hardware parts out of reach of children
- Do not drill holes for Dynabolts through flooring with membrane for waterproofing. Bolting of stands to floor to be done by others ( Furnx installers do not bolt locker seats &/or stands to floor )

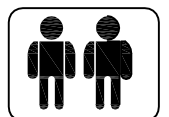


# Assembly Instructions

MODEL NO:STT91-30 T/B

## STEP5

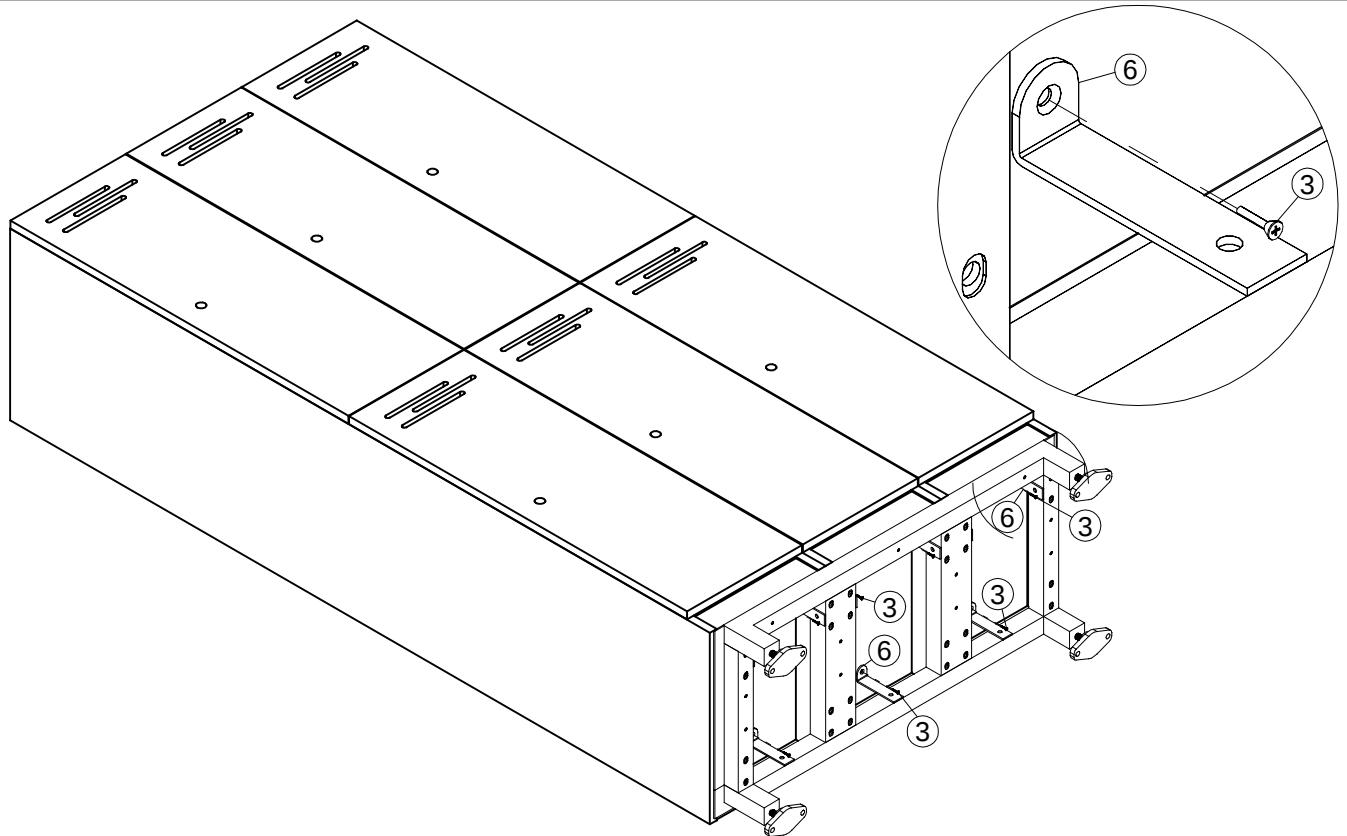

## STEP6

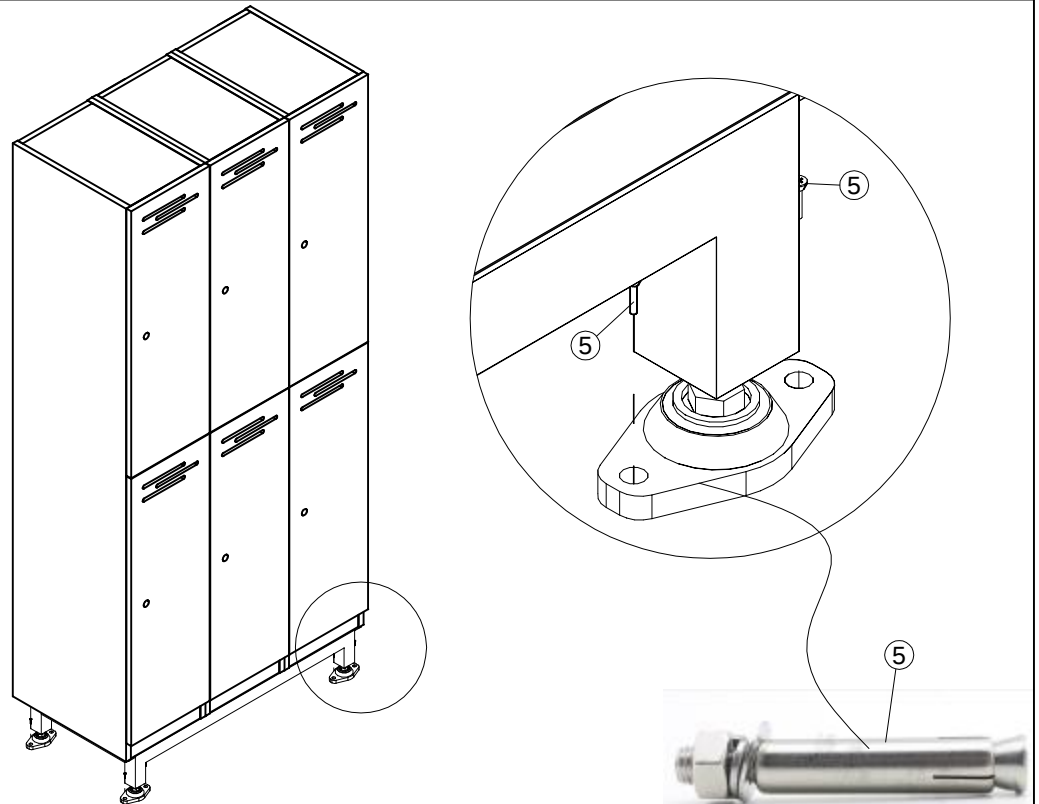

### IMPORTANT NOTE:

- Place all laminated parts on a clean and smooth surface such as a rug or carpet to avoid the parts from being scratched.
- Check to be sure that you have all parts and hardware.
- Remove all wrapping materials, including staples & packing straps before you start to assemble.
- Don't tighten all screws/bolts until all completely assembled.
- Keep all hardware parts out of reach of children
- Do not drill holes for Dynabolts through flooring with membrane for waterproofing. Bolting of stands to floor to be done by others ( Furnx installers do not bolt locker seats &/or stands to floor )

