

DELILAH ARM CHAIR

ASSEMBLY
INSTRUCTIONS



scan me

PARTS:

TOOLS (NOT INCLUDED):

SHELL (A)



Albury Side Albury Arm Bronte Chevron Coogee Stockholm

Shells compatible with all standard chair frames.

1pc

FRAME (B)



Metal / Timber
Frame

1pc

4MM HEX HEAD (C)



4pc

WASHER (D)




4pc

THREADLOCK



IMPACT DRILL




We strongly recommend applying thread lock to the full length of all screws and using an impact drill. Scan the QR code with a phone or tablet to access the assembly video.

WARNING:
Always take care with an impact drill gun, especially when screwing into the frame.


INSTRUCTIONS:

STEP 1:

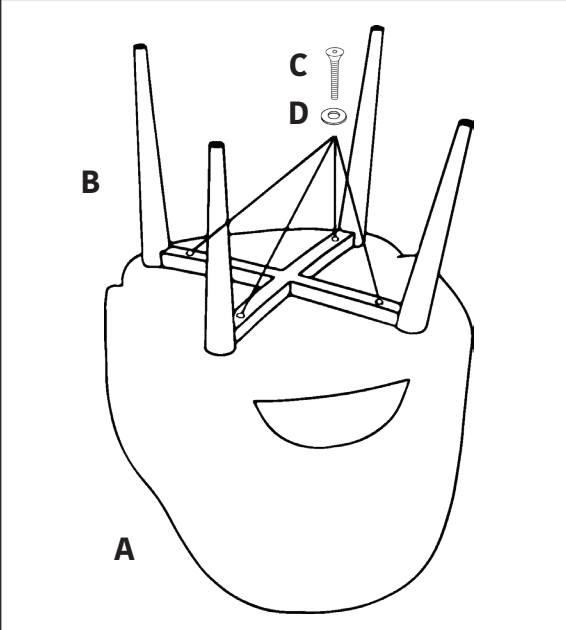

The diagram shows the underside of the chair shell (A) with the frame (B) being attached. Four screws (C) and washers (D) are shown being inserted into the frame to secure it to the shell.

COMPLETE:

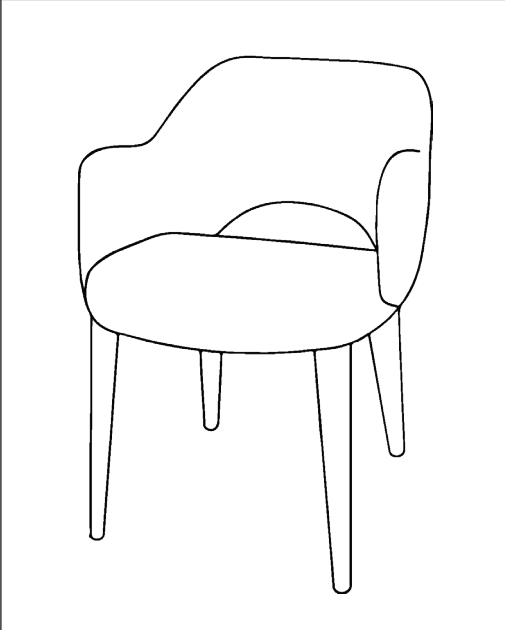

The diagram shows the fully assembled chair from a side profile, featuring a modern, curved backrest and four legs.